

SEASIDE CASUAL FURNITURE

ENVIRO WOOD

(92,93,94) Nantucket Side & Coffee Tables & Ottoman rev. B

Parts List:

- (1) Table Top
- (4) Legs

Hardware:

- (12) 3" Hex 1/4" Lags
- (12) 5/8" Plugs

Tools Required:

- Phillip's Head Screwdriver
- 4MM Allen Wrench (Included)




Assembly Instructions

Step One: Set Up

READ ENTIRE INSTRUCTIONS BEFORE BEGINNING! Carefully remove contents from box. Make sure that all parts and hardware are included.

Step Two: Leg Assembly

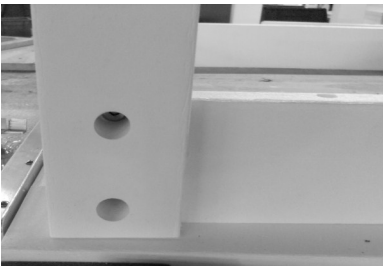

Place Table Top face down on a flat clean surface. Place Legs upside down on each side of Table Top aligning pre-drilled holes (Left Picture). Attach using (2) 3" Hex 1/4" Lags. Repeat process on other side.

Step Three: Side Apron Assembly

Attach using (1) 3" Hex 1/4" Lags. Repeat process on other side. (Right Picture)



Step Four: Tightening of Hardware

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.** Plug all holes using (12) 5/8" Plugs. Don't force plugs in with anything that can damage them.