

SEASIDE CASUAL FURNITURE

ENVIRO WOOD

(095) 24In X 50In Windsor Buffet Table rev. A (195) 19In X 36In Windsor Buffet Table rev. A

Parts List:

- (1) Table Top
- (1) Shelf
- (2) Leg Assemblies

Tools Required:

Phillip's Head Screwdriver
4MM Allen Wrench (Included)



Hardware:

- (8) 3" Hex 1/4" Lags
- (4) 1-3/4" Phillip's Head Screws
- (4) 1-1/4" Phillip's Head Screws
- (8) 5/8" Plugs
- (12) 3/4" Pan Head Screws - (095 Only)

Note:


095 Does have Aluminum
195 Dose not have Aluminum.

Assembly Instructions

Step One: Set Up

READ ENTIRE INSTRUCTIONS BEFORE BEGINNING! Carefully remove contents from box. Make sure that all parts and hardware are included.

Step Two: Leg Assembly (095,195)

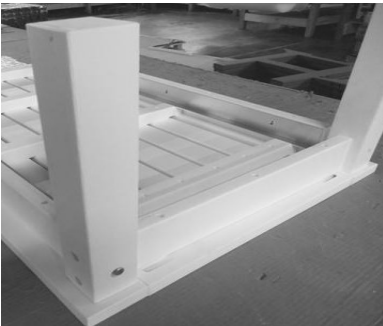

Place Table Top face down on a flat clean surface. Place Leg Assembly upside down on each side of Table Top aligning pre-drilled holes and facing the Aluminum Cleat inside the Table Top (Left Picture). Attach using (2) 3" Hex 1/4" Lags. Repeat process on other side. (Right Picture)




Step Three: Short Apron Attachment (095,195)

Attach Short Apron, which is pre-assembled on Leg Assembly to Table Top using (2) 1-3/4" Phillips Head Screws. (Right Picture) Repeat process on other side.

!!!WARNING!!! Do not use a Portable Screw Gun. This may cause screws to go through the Table Top.




Step Four: Short Apron Aluminum Attachment (095 Only)

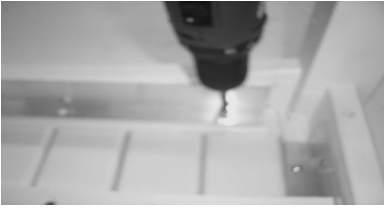

Attach Short Apron Aluminum, which is pre-assembled on Leg Assembly to Table Top using (3) 3/4" Pan Head Screws. (Left Picture) Repeat process on other side.

Step Five: Shelf Assembly (095,195)

Flip Assembly to standing position. Place Shelf Assembly into position between the Leg Assemblies resting on top of Lower Shelf Apron Stretchers aligning pre-drilled holes. Make sure the shelf slats are resting tightly against the Lower Shelf Apron before securing. Attach using (2) 3" Hex 1/4" Lags. (Right Picture) Repeat process on other side.

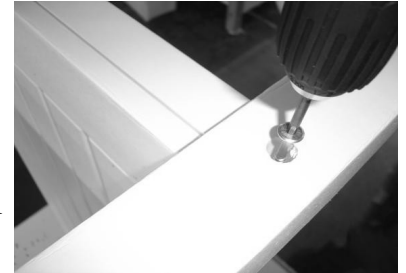

Step Six: Lower Shelf Apron Attachment (095,195)

Attach Lower Shelf Apron, which is pre-assembled on Leg Assembly to Shelf using (2) 1-1/4" Phillips Head Screws. (Right Picture) Repeat process on other side.

!!!WARNING!!! Do not use a Portable Screw Gun. This may cause screws to go through the Shelf.



Step Seven: Lower Shelf Apron Aluminum Attachment (095 Only)



Attach Lower Shelf Apron Aluminum, which is pre-assembled on Leg Assembly to Shelf using (3) 3/4" Pan Head Screws. (Left Picture) Repeat process on other side.

Step Eight: Tightening of Hardware

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.** Plug all holes using (8) 5/8" Plugs. Don't force plugs in with anything that can damage them.