

# MAD Chat Chair

289













## ASSEMBLY INSTRUCTIONS


# 1

**PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.**  
Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


**Tools Required:** 4mm Allen Wrench (included); #2 Phillips Head Screwdriver;  
(Recommended: Rubber Mallet; Power Drill)

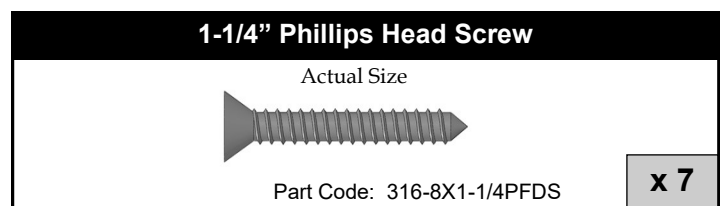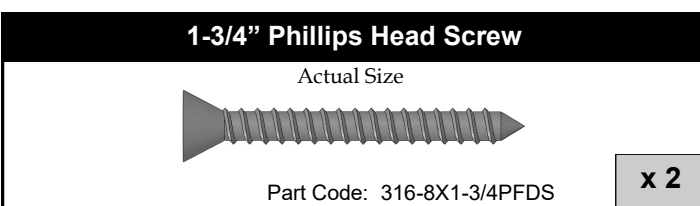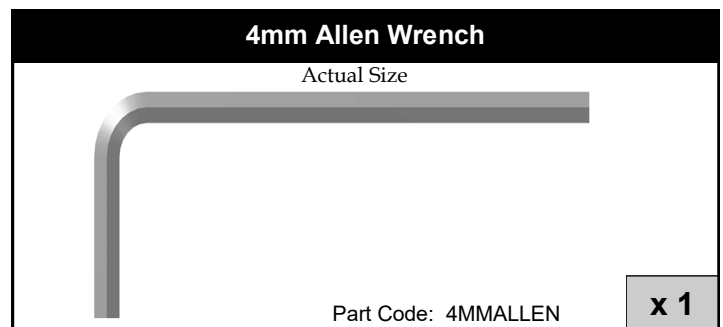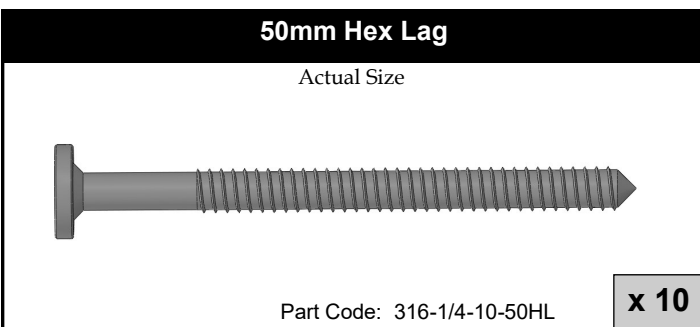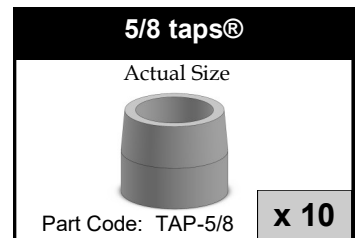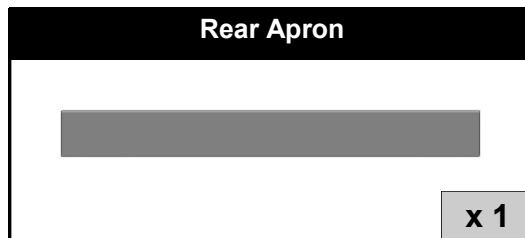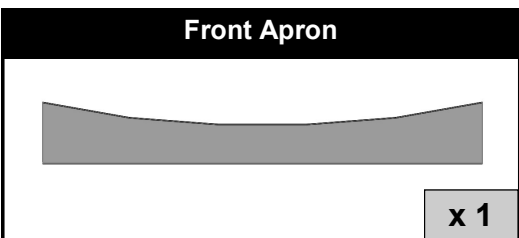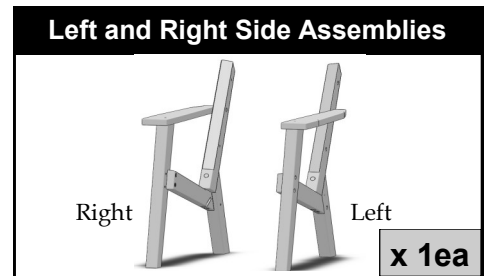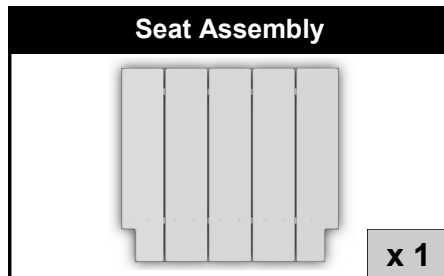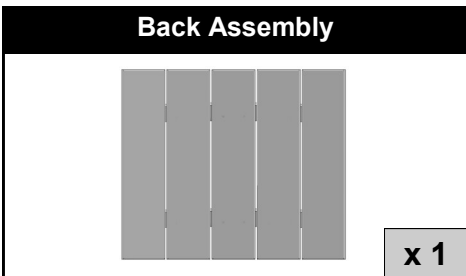


**WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114**  
Seaside Casual Furniture | 11 Industrial Drive Coventry, RI 02816 | 800-809-3114 | sales@seasidecasual.com

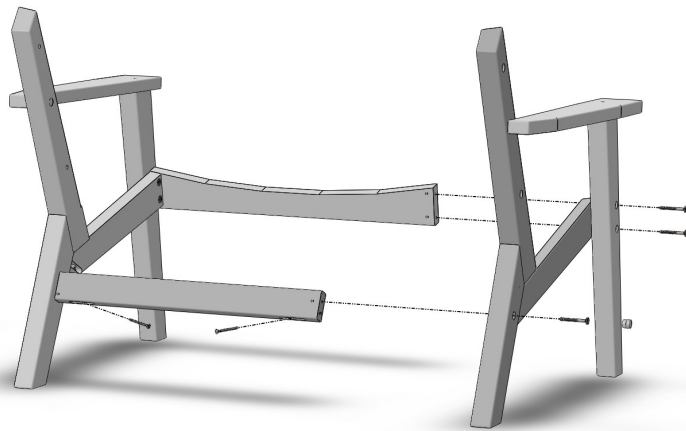**2****ATTACH APRONS TO SIDE ASSEMBLIES**

Align Front and Rear Aprons with Front and Rear Legs. Secure with (6) 50mm Hex Lags through counter-bored holes in Legs, and (2) 1-3/4" Screws through pockets in Rear Apron. Plug holes in Legs with 5/8" taps®.

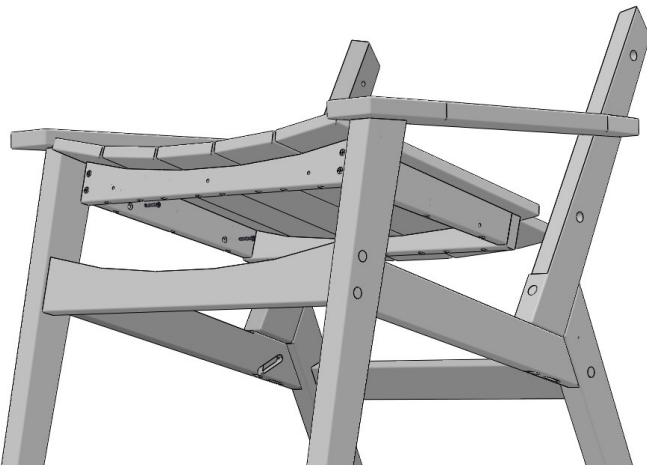**3****ATTACH SEAT ASSEMBLY**

Drop Seat Assembly in between Aprons. Secure with (7) 1-1/4" Screws through counter-sunk holes in bottom of Seat, starting with holes in the front.

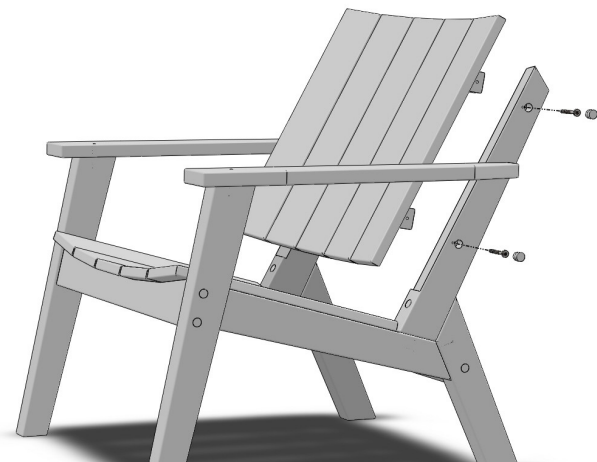**4****ATTACH BACK ASSEMBLY**

Align pilot holes in rear stretchers of Back Assembly with the counter-bored holes in the Rear Legs. Secure with (4) 50mm Hex lags. Plug holes with 5/8" taps®.