

# SEASIDE CASUAL FURNITURE

## ENVIRO WOOD

### (12,20) Adirondack Classic & Shellback Love Seats rev. A

#### Parts List:

- (1) Seat Assembly
- (1) Back Assembly
- (2) Front Legs
- (1) Mid Leg
- (2) Arms



#### Hardware:

- (11) 3-1/2" Connector Bolts
- (2) 2-3/4" Connector Bolts
- (13) Flat Washers
- (13) Lock Washers
- (13) Nuts
- (5) 1-3/4" Phillip's Head Screws

#### Tools Required:

- Phillip's Head Screwdriver
- 7 /16 Socket or Wrench
- 4MM Allen Wrench (Included)


### Assembly Instructions

#### Step One: Set Up

**READ ENTIRE INSTRUCTIONS BEFORE BEGINNING!** Carefully remove contents from box. Make sure that all parts and hardware are included.

#### Step Two: Leg Assembly

Place Seat Assembly on it's side on a flat clean surface. Locate the Front Leg that you will be installing (Right Picture). Insert a 3-1/2" connector bolt down through the outermost pre-drilled hole in front leg and align this with the pre-drilled hole in seat assembly. Install flat washer, lock washer, and nut. Finger tighten nut onto bolt in Front Leg, then partially install the other (2) 3-1/2" connector bolts, washers and nuts, next to the one you have just installed. Flip the chair over and repeat process for the other side. In front middle of seat assembly attach Mid Leg with (3) 3-1/2" connector bolt, washers and nuts. Do not tighten at this time.

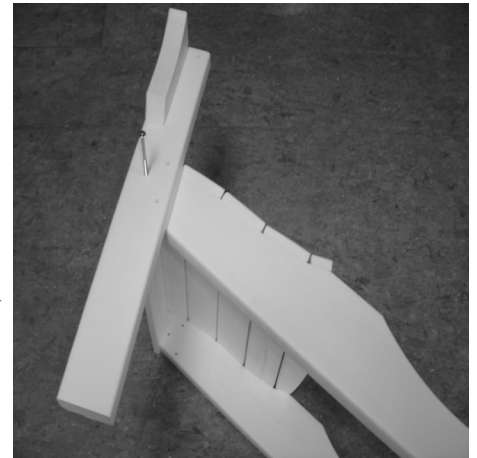


#### Step Three: Arm Assembly



Arms should be installed with curve side on the inside of the chair. (Left Picture). Place Arm on top of Front Leg. Align pre-drilled hole in arm with the pre-drilled hole located at the top of the Front Leg. Install a 3-1/2" connector bolt through pre-drilled hole in the Front Leg, then through pre-drilled hole under arm. Install flat washer, lock washer and nuts. Do not tighten at this time. Repeat process on other side.

### **Step Four: Arm & Back Attachment**

Install (1) 2-3/4" connector bolt through pre-drilled hole through arm and through upper back yoke (Right Picture). Finger tighten flat & lock washers and nuts. Do not tighten at this time. Repeat process for opposite side.

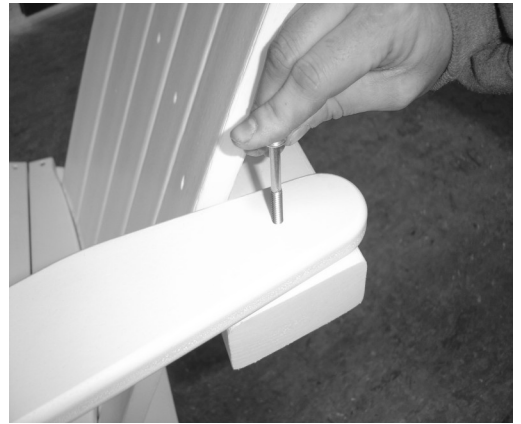

### **Step Five: Back Assembly**

Place Back Assembly on top of mounting surface of Rear Legs, (Left Picture). Push Back Assembly forward until it's aligned with Seat Assembly. Hold Back Assembly in place and install (5) 1-3/4" Phillip's Head Screws into pre-drilled holes on each side.



### **Step Six: Tightening of Hardware**

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.**